


Package Contents


The e6wl package includes:

- Power adapter and cable
- VESA mounting bracket and screws
- Rubber feet
- 2x WiFi antennae
- 2x LTE antennae
- e6wl appliance

Rear Panel

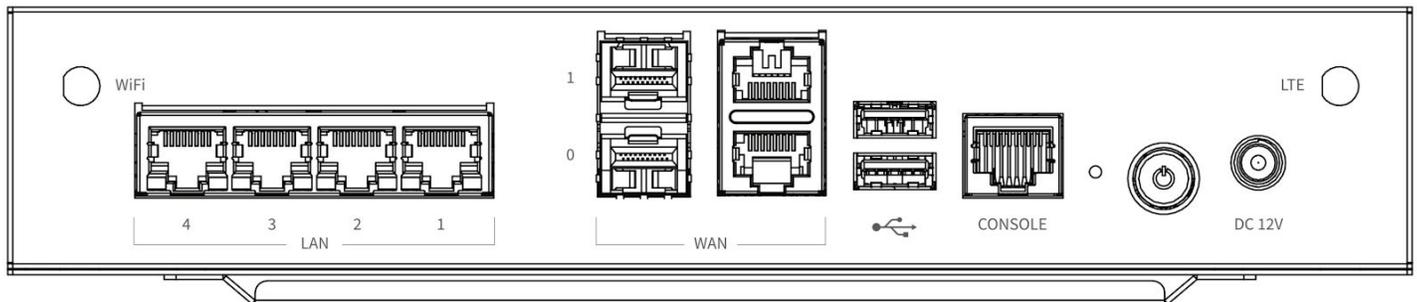

Front Panel

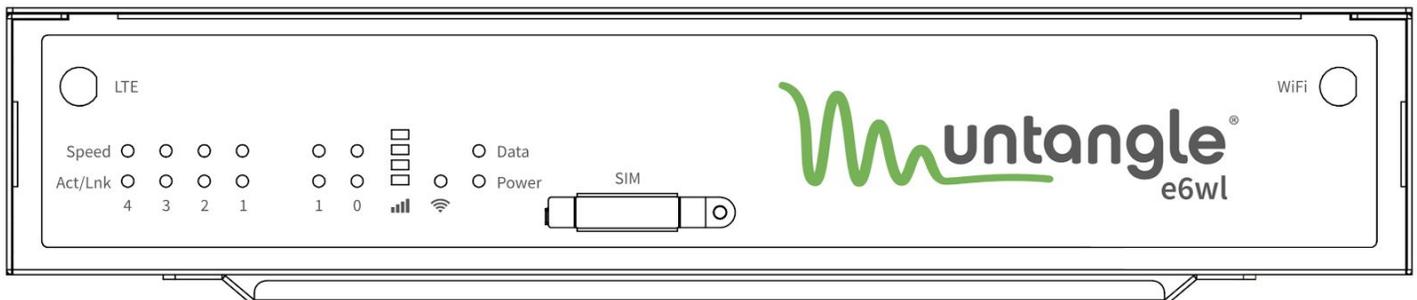

Installation

1. For VESA mount installations, attach the mounting bracket to the bottom of the appliance using the provided screws.
2. For desktop installation, attach the rubber feet to the bottom corners of the appliance.
3. Fasten the included WiFi antennae to the WiFi labeled SMA connectors.
4. Fasten the included LTE antennae to the LTE labeled SMA connectors.
5. Connect an ethernet or Fiber cable from your Internet modem or router to either of the WAN ports.
6. Connect an ethernet cable from your management computer to any of the LAN ports.
7. Plug in the power adapter to a power source and connect it to the power input on the rear panel.
8. Power on the system by pressing the power button located on the rear panel next to the power input.

Getting Started

You can manage your Untangle SD-WAN Router via **Command Center** or from the local network.

From Command Center

1. Navigate your web browser to <https://untangle.com/cmd>.
2. Log in with your Untangle Command Center account, or click **Create Account** to set up an account.
3. Navigate to the Appliances screen and click **Add**.
4. Enter the Untangle serial number located on the bottom of your appliance.



5. Click **Add** to confirm the new appliance.
6. After the appliance successfully adds to your account, you can select it from the list of appliances.
7. Click **Remote Access** to connect to the administration of your new appliance.
8. Continue to the setup wizard.

From the local network

1. Connect an ethernet cable from your management computer or LAN switch to the LAN port.
2. Alternatively, you can connect to the WiFi network named **Untangle** using the default password **12345678**.
3. From your management computer, check the network status of your system and confirm that you receive an IPv4 address in the subnet of 192.168.1.0/24 (e.g. 192.168.1.100).
4. In a browser, navigate to **http://192.168.1.1**.
5. Accept the SSL certificate notice in your browser and continue to the setup wizard.

Warranty

This appliance is covered by a one or three year warranty based on the option chosen at the time of purchase. For a description of the warranty policy visit <http://www.untangle.com/refund-return-policy>.

Support & Documentation

For Untangle SD-WAN Router documentation, technical support availability, contact information, and troubleshooting tips visit <http://support.untangle.com>.